SyncMaster 2220LM

Install drivers

Windows

Downloaded from ManualMonitor.com Manuals

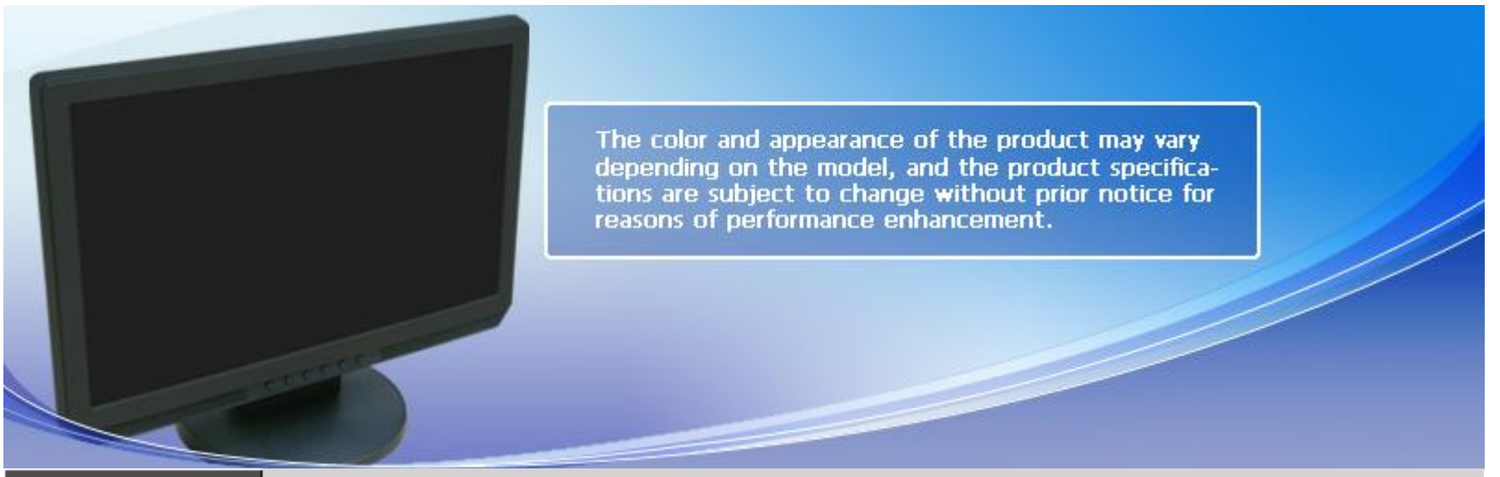
The color and appearance of the product may vary depending on the model, and the product specifications are subject to change without prior notice for reasons of performance enhancement.

Notational

Please read the following safety instructions as they are designed to prevent damage to property and harm to the user.

Warning / Caution

Failure to follow directions noted by this symbol could result in bodily harm or damage to the equipment.

Notational Conventions

Prohibited	Important to read and understand at all times
Do not disassemble	Disconnect the plug from the outlet
Do not touch	Ground to prevent an electric shock

Downloaded from ManualMonitor.com Manuals

Power

When not used for an extended period of time, set your computer to DPM.
If using a screen saver, set it to active screen mode.

The images here are for reference only, and are not applicable in all cases (or countries).

Shortcut to Anti-Afterimage Instructions

Do not use a damaged or loose plug.

- This may cause electric shock or fire.

Do not pull the plug out by the wire nor touch the plug with wet hands.

- This may cause electric shock or fire.

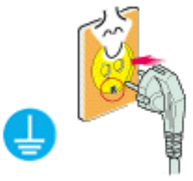

Use only a properly grounded plug and receptacle.

- An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)

Insert the power plug firmly so that it does not come loose.

- A bad connection may cause fire.

Do not excessively bend the plug and wire nor place heavy objects upon them, which could cause damage.

- This may cause electric shock or fire.

Do not connect too many extension cords or plugs to one outlet.

- This may cause fire.

Downloaded from ManualMonitor.com Manuals

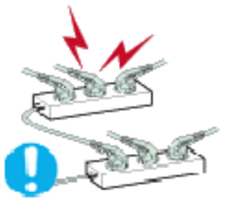

- **Do not disconnect the power cord while using the monitor.**
  - A surge may be caused by the separation and may damage the monitor.

- **Do not use the power cord when the connector or plug is dusty.**
  - If the connector or plug of the power cord is dusty, clean it with a dry cloth.
  - Using the power cord with a dusty plug or connector may cause electric shock or fire.

- **To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.**
  - This may cause electric shock or fire.

Installation

Be sure to contact an authorized Service Center, when installing your monitor in a location with heavy dust, high or low temperatures, high humidity, and exposed to chemical substances and where it operates for 24 hours such as at airports, train stations etc.

Failure to do so may cause serious damage to your monitor.

- **Place your monitor in a location with low humidity and a minimum of dust.**
  - Failure to do so may cause electric shock or fire inside the monitor.

- **Do not drop the monitor when moving it.**

Downloaded from ManualMonitor.com Manuals

- This may cause damage to the product or the person carrying it.

- **Install the monitor base in a showcase or shelf so that the end of the base does not protrude from the showcase or shelf.**
  - Dropping the product may cause damage to the product or the person carrying it.

- **Do not place the product on an unstable or small surface area.**
  - Place the product on an even and stable surface, as the product may fall and cause harm to someone walking by, specifically children.

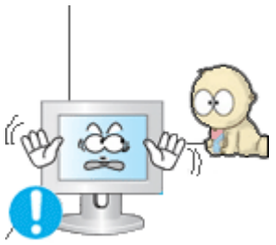

- **Do not place the product on the floor.**
  - Take care, as someone, specifically children may trip over it.

- **TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.**
  - Otherwise, this may cause fire.

- **Keep any heating devices away from the power cable.**
  - A melted coating may cause electric shock or fire.

- **Do not install the product in places with poor ventilation, for instance, a bookshelf, closet, etc.**
  - Any increase in the internal temperature may cause fire.

- **Put down the monitor carefully.**

Downloaded from ManualMonitor.com Manuals

- Failing to do so may damage the monitor.

- **Do not place the monitor face down.**
  - This may damage the TFT-LCD surface.The installation of the bracket must be done by a qualified professional.

- **Installing a wall bracket must be done by a qualified professional.**
  - Installing the bracket by unqualified personnel may result in injury.
  - Always use the mounting device specified in the owner's manual.

- **When installing the product, make sure to keep it away from the wall (more than 10 cm/4 inches) for ventilation purposes.**
  - Poor ventilation may cause an increase in the internal temperature of the product, resulting in a shortened component life and degraded performance.

- **Keep the plastic packaging (bag) out of children's reach.**
  - The plastic packaging (bag) may cause suffocation if children play with it.

Clean

When cleaning the monitor case or the surface of the TFT-LCD screen, wipe with a slightly moistened, soft fabric.

- **Do not spray water or detergent directly onto the monitor.**

Downloaded from ManualMonitor.com Manuals

- This may cause damage, electric shock or fire.

- **Use the recommended detergent with a smooth cloth.**

- **If the connector between the plug and the pin is dusty or dirty, clean it properly using a dry cloth.**
  - A dirty connector may cause electric shock or fire.

- **Make sure to unplug the power cord before cleaning the product.**
  - Otherwise, this may cause electric shock or fire.

- **Unplug the power cord from the power outlet and wipe the product using a soft, dry cloth.**
  - Do not use any chemicals such as wax, benzene, alcohol, thinners, insecticide, air freshener, lubricant or detergent.

- **Contact the SAMSUNG customer care center or Customer Center for interior cleaning once a year.**
  - Keep the product's interior clean. Dust which has accumulated in the interior over an extended period of time may cause a malfunction or fire.

Others

- **Do not remove the cover (or back).**

Downloaded from ManualMonitor.com Manuals

- This may cause electric shock or fire.
- Refer to a qualified servicing company.

- **If your monitor does not operate normally - in particular, if there is any unusual sound or smell coming from the monitor - unplug it immediately and contact an authorized dealer or the Service Center.**
  - This may cause electric shock or fire.

- **Keep the product away from places exposed to oil, smoke or moisture; do not install inside a vehicle.**
  - This may cause a malfunction, electric shock or fire.
  - In particular, avoid operating the monitor near water or outdoors where the monitor could be exposed to snow or rain.

- **If the monitor is dropped or the casing is damaged, turn the monitor off and unplug the power cord. Then contact the Service Center .**
  - The monitor may malfunction, causing electric shock or fire.

- **Disconnect the plug from the outlet during storms or lightning or if it is not used for a long period of time.**
  - Failure to do so may cause electric shock or fire.

- **Do not try to move the monitor by pulling only the wire or the signal cable.**
  - This may cause a breakdown, electric shock or fire due to damage to the cable.

- **Do not move the monitor right or left by pulling only the wire or the signal cable.**
  - This may cause a breakdown, electric shock or fire due to damage to the cable.

- **Do not cover the vents on the monitor cabinet.**

Downloaded from ManualMonitor.com Manuals

- Bad ventilation may cause a breakdown or fire.

- **Do not place water containers, chemical products or small metal objects on the monitor.**
  - This may cause a malfunction, electric shock or fire.
  - If a foreign substance enters the monitor, unplug the power cord and contact the Service Center.

- **Keep the product away from combustible chemical sprays or inflammable substances.**
  - This may cause an explosion or fire.

- **Never insert anything metallic into the monitor openings.**
  - This may cause electric shock, fire or injury.

- **Do not insert metal objects such as chopsticks, wire and tools or inflammable objects such as paper or matches into the vent, headphone port or AV ports or etc.**
  - This may cause electric shock or fire. If an alien substances or water enters the product, turn the product off, unplug the power connector from the wall outlet and contact the Service Center.

- **When viewing a fixed screen for an extended period of time, residual image or blurriness may appear.**
  - Change the mode to energy saving mode or set a screensaver to a changing picture when away from the monitor for an extended period of time.

- **Adjust the resolution and frequency to the level appropriate for the model.**
  - An inappropriate resolution may cause undesirable picture quality.

    22 inch Wide (55.9cm) - 1680 X 1050

Downloaded from ManualMonitor.com Manuals

- **Keep the volume at a comfortable level when using the headphones.**
  - Excessively loud volume level may damage hearing.

- **Viewing the monitor continuously at a too close angle may result in damage to your eyesight.**

- **To ease eye strain, take at least a five-minute break after every hour of using the monitor**.

- **Do not install the product on an unstable, uneven surface or a location prone to vibrations.**
  - Dropping the product may cause damage to the product or the person carrying it. Using the product in a location prone to vibrations may shorten the lifetime of the product or may cause the product to catch fire.

- **When moving the monitor, turn off and unplug the power cord. Make sure that all cables, including the antenna cable and cables connected to other devices, are disconnected before moving the monitor.**
  - Failure to disconnect cables may damage it and cause fire or electric shock.

- **Place the product out of children's reach, as they could damage by hanging onto it.**
  - A falling product may cause injury to the person or even fatality.

- **When not using the product for an extended period of time, keep the product unplugged.**
  - Otherwise, this may cause heat emission from the accumulated dirt or degraded insulation, causing electric shock or fire.

- **Do not place your children's favorite toys or any other objects of interest on the product.**

Downloaded from ManualMonitor.com Manuals

- Children may try to climb on the product to retrieve an object. The product could fall, causing injury or even fatality.

- **When lifting up or moving the monitor, do not lift the monitor upside down while holding only the stand.**
  - This may cause your monitor to fall, and become damaged or cause personal injury.

Good Postures When Using the Monitor

- **Try to maintain a good posture when using the monitor.**
  - Keep your back straight.
  - Keep a distance of about 45 ~ 50 cm between your eyes and the monitor screen. Look at the screen from slightly above it, and have the monitor directly in front of you.
  - Tilt the monitor upwards by 10 ~20 degrees. Adjust the monitor height so that the top of the monitor is slightly below eye level.
  - Adjust the monitor angle so that there is no reflected light on the screen.Try to maintain your arms perpendicular to your armpits.
  - Keep your arms level with the back of your hands.
  - Keep the angle of the elbow perpendicular.
  - Keep the angle of the knees at more than 90 degree. Do not let your feet fall up from the floor. Adjust the arm position so that it is below the heart.

Downloaded from ManualMonitor.com Manuals

PRODUCT INFORMATION (Image Retention Free)

LCD Monitors and TVs may have image retention when switching from one image to another especially after displaying a stationary image for a long time.
This guide is to demonstrate correct usage of LCD products in order to protect them from Image retention.

- **Warranty**
  Warranty does not cover any damage caused by image retention.
  Burn-in is not covered by the warranty.

- **What is Image retention ?**
  During normal operation of a LCD panel, pixel image retention doesn't occur. However, if the same image is displayed for a long time, a slight difference in electric charge accumulates between the two electrodes which encase the liquid crystal. This may cause the liquid crystal to build up in a certain areas of the display. Thus, the previous image is retained when switching to a new video image. All display products, including LCD,are subject to image retention. This is not a product defect.

  Please follow the suggestions below to protect your LCD from image retention

- **Power Off, Screen Saver, or Power Save Mode**
  Ex)
  - Turn the power off when using a stationary pattern.
    - Turn the power off for 4 hours after 20 hours in use
    - Turn the power off for 2 hours after 12 hours in use
  - Use a Screen saver if possible
    - Screen saver in one color or a moving image is recommended.
  - Set the Monitor to power off with the PC Display Properties Power Scheme.

- **Suggestions for specific applications**
  Ex) Airports, Transit Stations, Stock Markets, Banks, and Controlling Systems
  We recommend that you follow set up of your display system program as below:

- **Display Information together with Logo or Moving image cycle.**
  Ex) Cycle : Display Information for 1 hour followed by a
  Display Logo or moving image for 1 minute.

- **Change the Color Information periodically (Use 2 different colors).**
  Ex) Rotate the Color Information with 2 colors every 30 minutes.

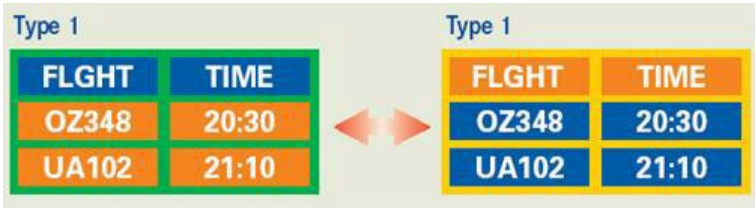

Avoid using a combination of characters and background color with large difference in luminance.
Avoid using Grey colors, which can cause Image retention easily.

- Avoid: Colors with big difference in luminance (Black & White, Grey)

Ex)

- Recommended settings: Bright colors with little difference in luminance

- Change the characters color and background color every 30 minutes

Ex)

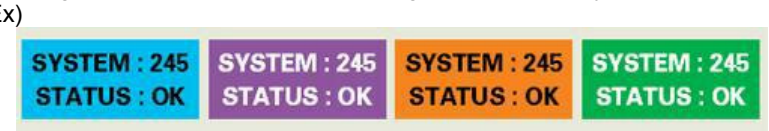

- Every 30 minutes, change the characters with movement.

Downloaded from ManualMonitor.com Manuals

Ex)

- **The best way to protect your monitor from Image retention is to set your PC or System to operate a Screen Saver program when you are not using it.**

  Image retention may not occur when a LCD panel is operated under normal conditions.

  Normal conditions are defined as continuously changing video patterns. When the LCD panel is operated for a long time with a fixed pattern (-over 12 hours-), there may be slight difference in voltage between electrodes that work the liquid crystal (LC) in a pixel. The voltage difference between electrodes increases with time, forcing the liquid crystal to lean. When this occurs, the previous image may be seen when the pattern is changed.
  To prevent this, the accumulated voltage difference must be decreased.

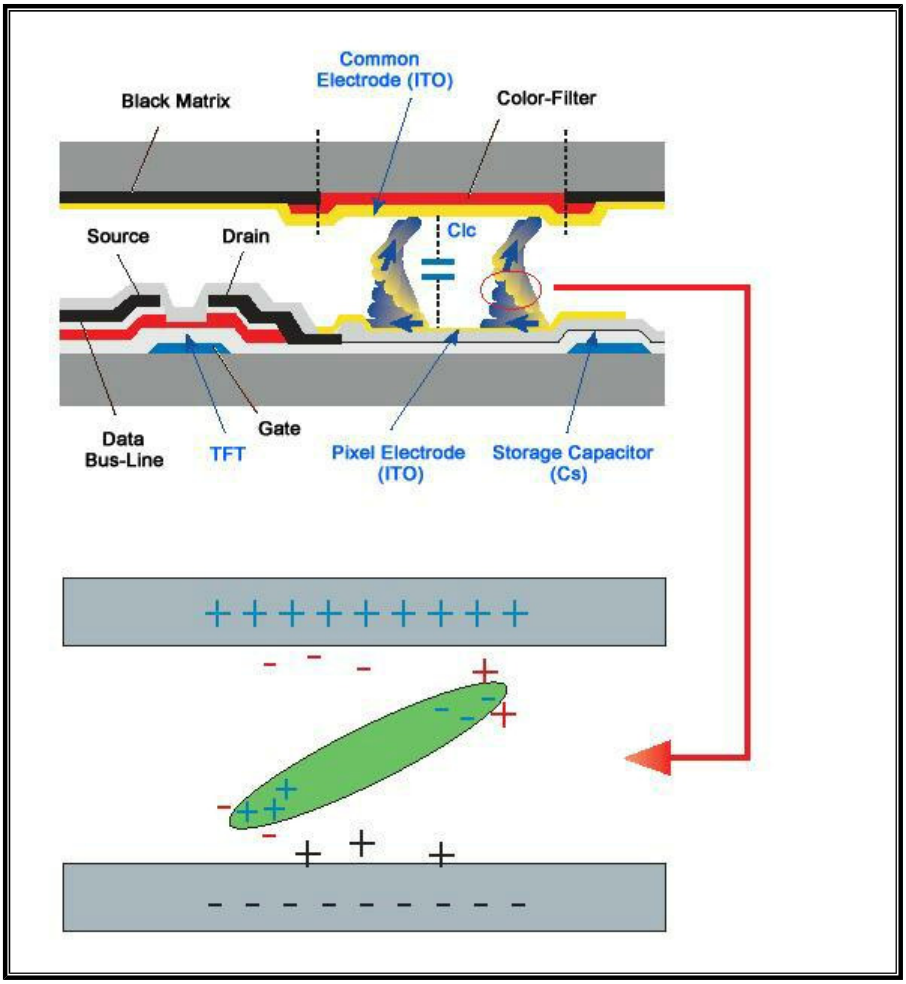

- Our LCD Monitor satisfies ISO13406-2 Pixel fault Class II

Downloaded from ManualMonitor.com Manuals

The color and appearance of the product may vary depending on the model, and the product specifications are subject to change without prior notice for reasons of performance enhancement.

Please make sure the following items are included with your monitor.
If any items are missing, contact your dealer.
Contact a local dealer to buy optional items.

- **Unpacking**
  - **Without stand**

Monitor

  - **With stand**

Downloaded from ManualMonitor.com Manuals

Monitor & Simple Stand

- **Manual**

Quick Setup Guide

Warranty Card/ Registration Card
(Not available in all locations)

User's Guide, Monitor Driver

- **Cable**

RGB Cable

Power Cord

Audio Cable

- **Front**

Downloaded from ManualMonitor.com Manuals

1 **MENU button [MENU/▭]**

Opens the OSD menu. Also use to exit the OSD menu or return to the previous menu.

2 **MagicBright™ [▲▲]**

MagicBright™ is a new feature providing optimum viewing environment depending on the contents of the image you are watching. Currently six different modes are available: Custom, Text, Internet, Game, Sport and Movie. Each mode has its own pre-configured brightness value. You can easily select one of six settings by simply pressing MagicBright™ control button.

1) Custom

Although the values are carefully chosen by our engineers, the pre-configured values may not be comfortable to your eyes depending on your taste.

If this is the case, adjust the brightness and contrast by using the OSD menu.

2) Text

For documentations or works involving heavy text.

3) Internet

For working with a mixture of images such as text and graphics.

4) Game

For watching motion pictures such as a game.

5) Sport

For watching motion pictures such as a sport.

6) Movie

Downloaded from ManualMonitor.com Manuals

		For watching motion pictures such as a DVD or Video CD. >>Click here to see an animation clip
3	**Volume button [🔊]**	When OSD is not on the screen, push the button to adjust volume. >>Click here to see an animation clip
2,3	**Adjust buttons [▼/▲]**	Adjust items in the menu.
4	**Enter button [⏎]**	Activates a highlighted menu item.
5	**AUTO button [AUTO]**	Use this button for auto adjustment. >>Click here to see an animation clip
6	**Power button [⏻]**	Use this button for turning the monitor on and off.
7	**Power indicator**	This light glows blue during normal operation, and blinks blue once as the monitor saves your adjustments.
8	**Speaker**	You can hear sound by connecting the soundcard of your PC to the monitor.

See PowerSaver described in the manual for further information regarding power saving functions. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods.

Rear

(The configuration at the back of the monitor may vary from product to product.)

Downloaded from ManualMonitor.com Manuals

1 **POWER port**	Connect the power cord for your monitor to the power port on the back of the monitor.
2 **RGB IN port**	Connect the signal cable to the 15-pin, D-sub port on the back of your monitor.
3 **AUDIO IN**	Connect the audio cable for your monitor to the audio port on the back of your computer.
4 **Kensington Lock**	The Kensington lock is a device used to physically fix the system when using it in a public place. (The locking device has to be purchased separately.) **For using a locking device, contact where you purchase it.**

5 Headphone connection terminal

See Connecting the Monitor for further information regarding cable connections.

Downloaded from ManualMonitor.com Manuals

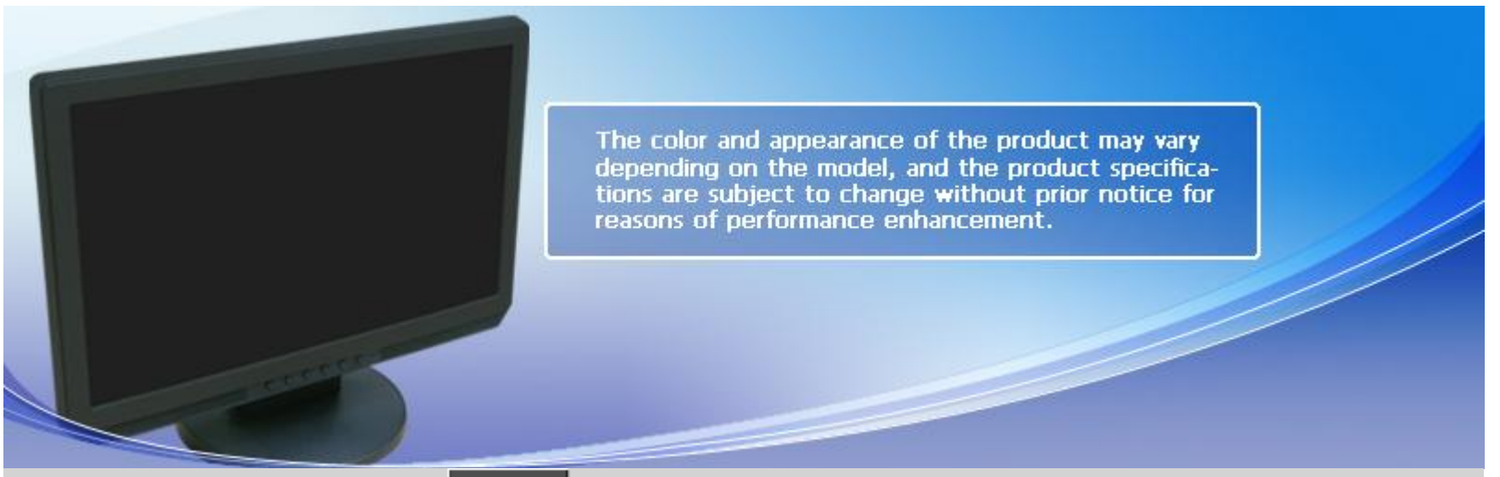
The color and appearance of the product may vary depending on the model, and the product specifications are subject to change without prior notice for reasons of performance enhancement.

Connecting the Monitor

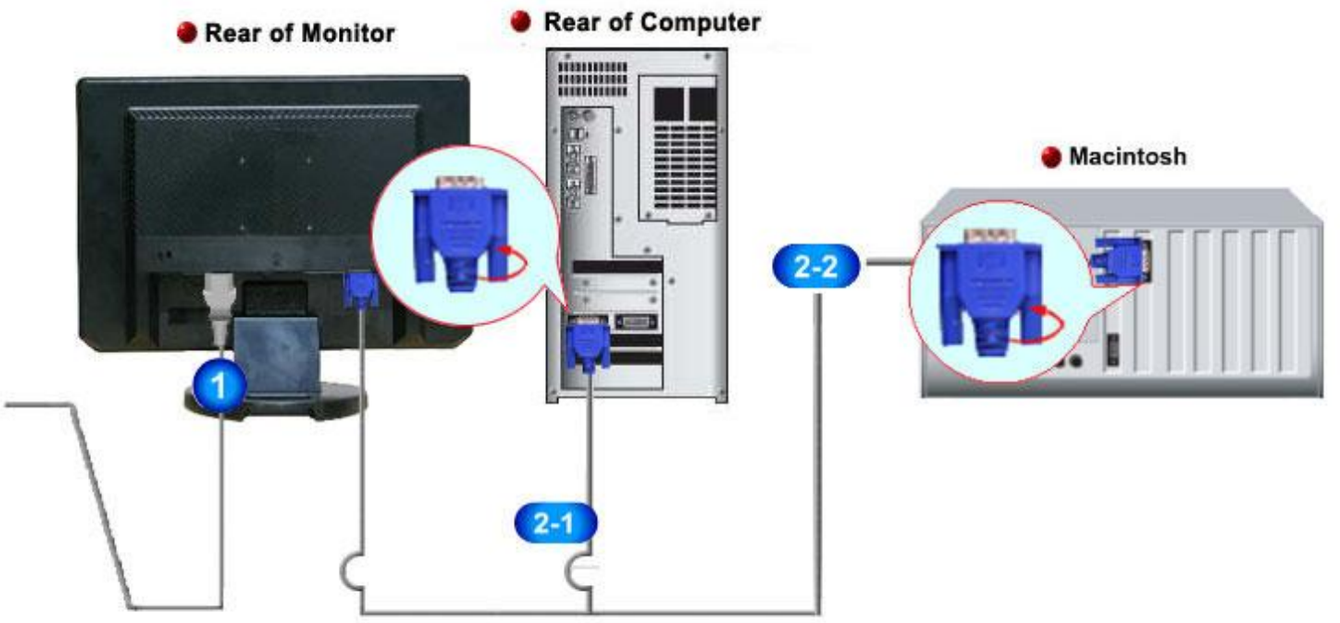

1. Connect the power cord for your monitor to the power port on the back of the monitor.
Plug the power cord for the monitor into a nearby outlet.

2. Use appropriate connection for your computer.

2-1. Using the D-sub (Analog) connector on the video card.
Connect the signal cable to the 15-pin, D-sub port on the back of your monitor.

[RGB IN]

2-2. Connected to a Macintosh.
Connect the monitor to the Macintosh computer using the D-sub connection cable.

Downloaded from ManualMonitor.com Manuals

If the monitor and the computer are connected, you can turn them on and use them.

Using the Stand

Monitor Assembly

Monitor and Bottom

Attaching a Base

This monitor accepts a 100 mm x 100 mm VESA-compliant mounting interface pad.

Downloaded from ManualMonitor.com Manuals

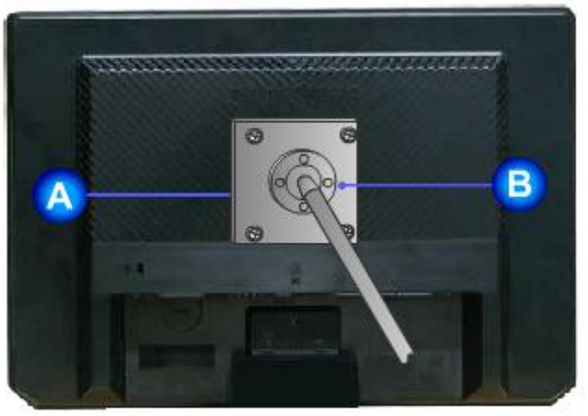

A. Monitor

B. Mounting interface pad (Sold separately)

1. Turn off your monitor and unplug its power cord.
2. Lay the LCD monitor face-down on a flat surface with a cushion beneath it to protect the screen.
3. Remove screws and then remove the stand from the LCD monitor.
4. Align the mounting interface pad with the holes in the rear cover mounting Pad and secure it with four screws that came with the arm-type base, wall mount hanger or other base.

- Do not use screws longer than the standard dimension, as they may damage the inside of the Monitor.
- For wall mounts that do not comply with VESA standard screw specifications, the length of the screws may differ depending on their specifications.
- Do not use screws that do not comply with the VESA standard screw specifications.
  Do not fasten the screws too tightly, as this may damage the product or cause the product to fall, leading to personal injury.
  Samsung is not liable for these kinds of accidents.
- Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or the consumer fails to follow the product installation instructions.

- To mount the monitor on a wall, you should purchase the wall mounting kit that allows you to mount the monitor at least 10cm away from the wall surface.
- Contact the nearest Samsung Service Center for more information. Samsung Electronics will not be responsible for damages caused by using a base other than those specified.
- **Please use Wall Mount according to the International standards.**

Installing the Monitor Driver (Automatic)

When prompted by the operating system for the monitor driver, insert the CD-ROM included with this monitor. Driver installation is slightly different from one operating system to another. Follow the directions appropriate for the operating system you have.

Downloaded from ManualMonitor.com Manuals

Prepare a blank disk and download the driver program file at the Internet web site shown below.

- Internet web site : http://www.samsung.com/ (Worldwide)
  http://www.samsung.com/monitor (U.S.A)
  http://www.sec.co.kr/monitor (Korea)
  http://www.samsungmonitor.com.cn/ (China)

1. Insert CD into the CD-ROM drive.
2. Click **"Windows"**
3. Choose your monitor model in the model list, then click the **"OK"** button.

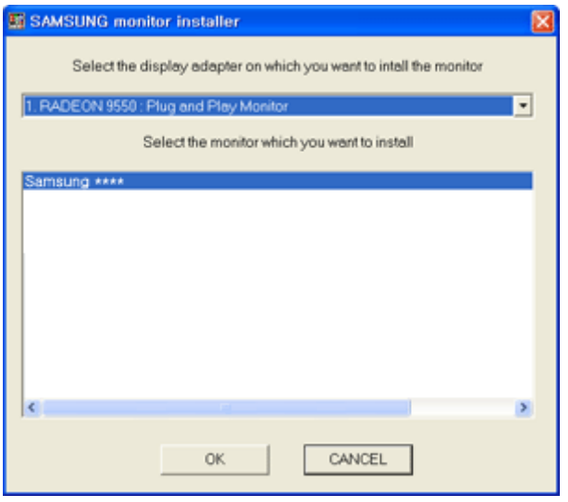
SAMSUNG monitor installer
Select the display adapter on which you want to intall the monitor
1. RADEON 9550 : Plug and Play Monitor
Select the monitor which you want to install
Samsung ****
OK
CANCEL

4. If you can see following message window, then click the **"Continue Anyway"** button. Then click **"OK"** button. (Microsoft® Windows® XP/2000 Operating System)

Hardware Installation
The software you are installing for this hardware:
Samsung ****
has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

This monitor driver is under certifying MS logo,and this installation doesn'tdamage your system.The certified driver will be posted on Samsung Monitor homepage
http://www.samsung.com/.

5. Monitor driver installation is completed.

Installing the Monitor Driver (Manual)

Downloaded from ManualMonitor.com Manuals

When prompted by the operating system for the monitor driver, insert the CD-ROM included with this monitor. Driver installation is slightly different from one operating system to another. Follow the directions appropriate for the operating system you have.

Prepare a blank disk and download the driver program file at the Internet web site shown below.

- Internet web site : http://www.samsung.com/ (Worldwide)
  http://www.samsung.com/monitor (U.S.A)
  http://www.sec.co.kr/monitor (Korea)
  http://www.samsungmonitor.com.cn/ (China)

Microsoft® Windows Vista™ Operating System

1. Insert your Manual CD into your CD-ROM drive.
2. Click (Start) and "**Control Panel**". Then, double-click on "**Appearance and Personalization**".

3. Click "**Personalization**" and then "**Display Settings**".

4.

Click "**Advanced Settings…**".

Downloaded from ManualMonitor.com Manuals

5. Click "**Properties**" in the "**Monitor**" tab. If the "**Properties**" button is deactivated, it means the configuration for your monitor is completed. The monitor can be used as is. If the message "**Windows needs…**" is displayed, as shown in the figure below, click "**Continue**".

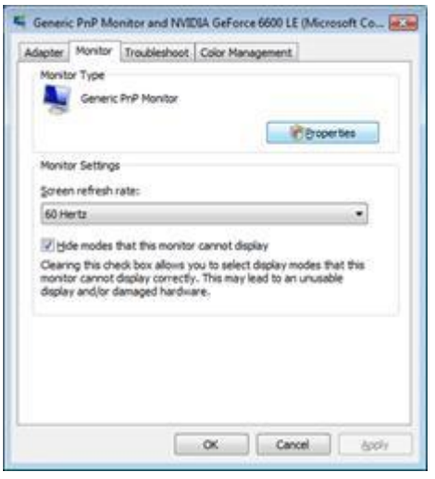
Generic PnP Monitor and NVIDIA GeForce 6600 LE (Microsoft Co...
Adapter
Monitor
Troubleshoot
Color Management
Monitor Type
Generic PnP Monitor
Properties
Monitor Settings
Screen refresh rate:
60 Hertz
Hide modes that this monitor cannot display
Clearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware.
OK
Cancel
Apply

This monitor driver is under certifying MS logo, and this installation doesn't damage your system.
The certified driver will be posted on Samsung Monitor homepage

http://www.samsung.com/

6. Click "**Update Driver…**" in the "**Driver**" tab.

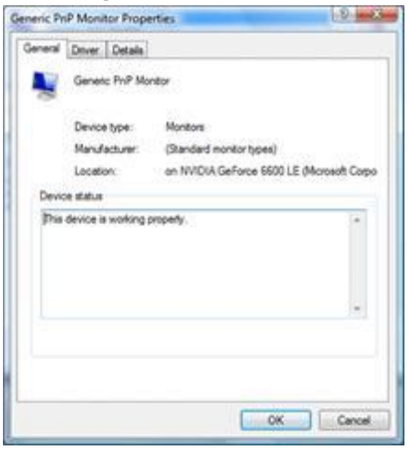

7. Check the "**Browse my computer for driver software**" checkbox and click "**Let me pick from a list of device drivers on my computer**".

Downloaded from ManualMonitor.com Manuals

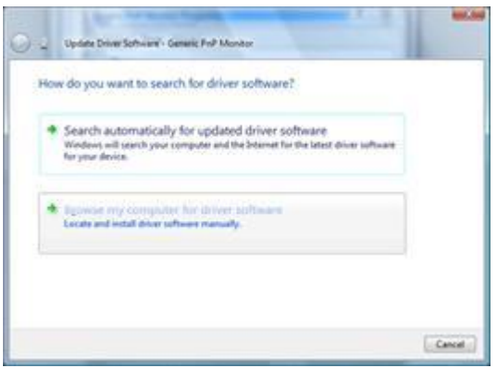
Update Driver Software - Generic PnP Monitor
How do you want to search for driver software?
Search automatically for updated driver software
Windows will search your computer and the Internet for the latest driver software for your device.
Browse my computer for driver software
Locate and install driver software manually.
Cancel

Update Driver Software - Generic PnP Monitor
Browse for driver software on your computer
Search for driver software in this location:
Browse...
Include subfolders
Let me pick from a list of device drivers on my computer
This list will show installed driver software compatible with the device, and all driver software in the same category as the device.
Next
Cancel

8. Click "**Have Disk…**" and select the folder (for example, D:\Drive) where the driver setup file is located, and click "**OK**".

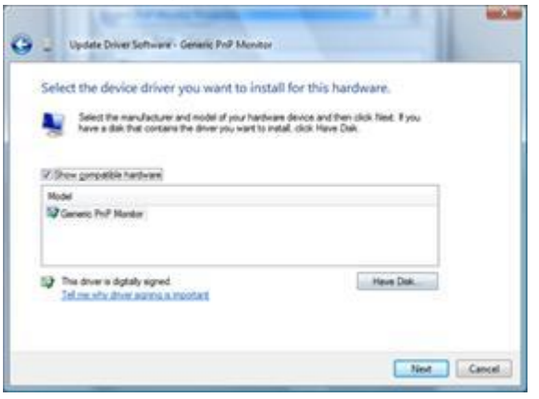
Update Driver Software - Generic PnP Monitor
Select the device driver you want to install for this hardware.
Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.
Show compatible hardware
Model
Generic PnP Monitor
This driver is digitally signed.
Tell me why driver signing is important
Have Disk...
Next
Cancel

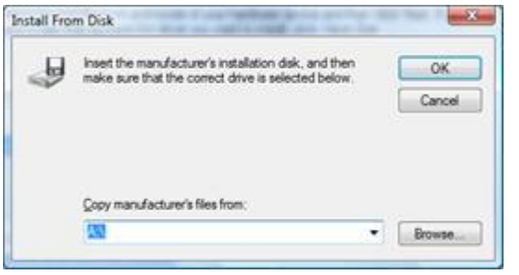
Install From Disk
Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.
OK
Cancel
Copy manufacturer's files from:
Browse...

9. Select the model that matches your monitor from the list of monitor models on the screen, and click "**Next**".

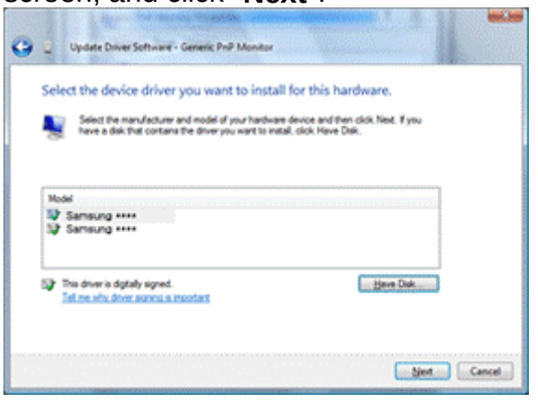
Update Driver Software - Generic PnP Monitor
Select the device driver you want to install for this hardware.
Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.
Model
Samsung ****
Samsung ****
This driver is digitally signed.
Tell me why driver signing is important
Have Disk...
Next
Cancel

10. Click "**Close**"→ "**Close**" → "**OK**" → "**OK**" on the following screens displayed in sequence.

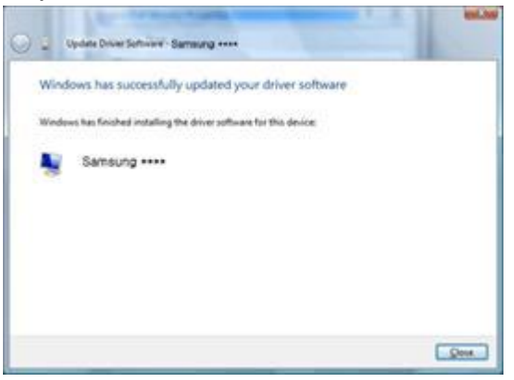
Update Driver Software - Samsung ****
Windows has successfully updated your driver software
Windows has finished installing the driver software for this device:
Samsung ****
Close

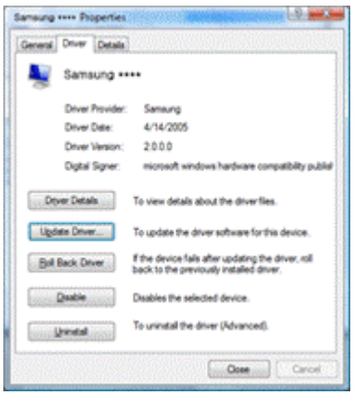

Downloaded from ManualMonitor.com Manuals

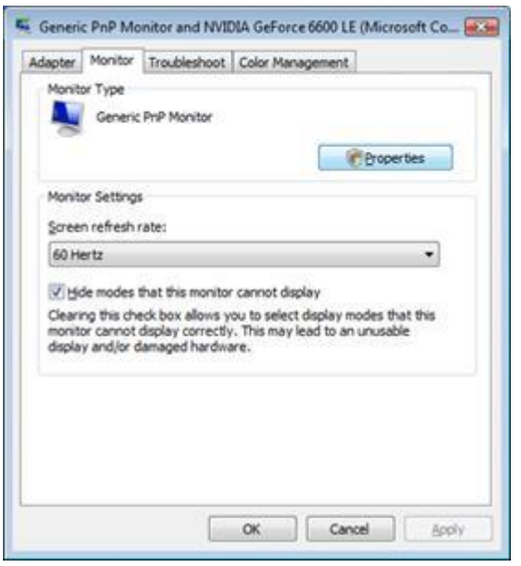
Generic PnP Monitor and NVIDIA GeForce 6600 LE (Microsoft Co...
Adapter
Monitor
Troubleshoot
Color Management
Monitor Type
Generic PnP Monitor
Properties
Monitor Settings
Screen refresh rate:
60 Hertz
Hide modes that this monitor cannot display
Clearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware.
OK
Cancel
Apply

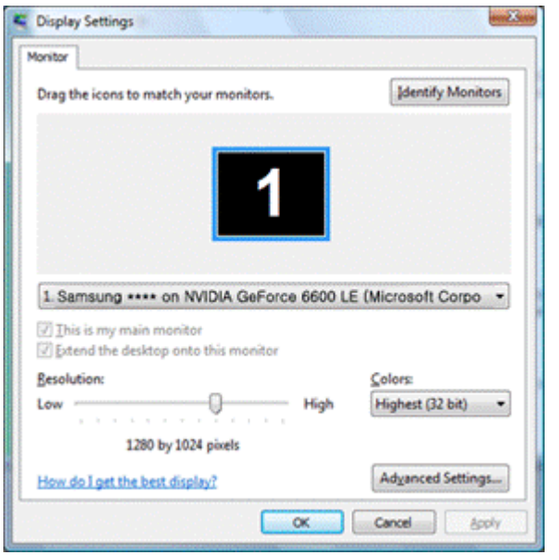

Microsoft® Windows® XP Operating System

1. Insert CD into the CD-ROM driver.
2. Click "**Start**" —> "**Control Panel**" then click the "**Appearance and Themes**" Icon.

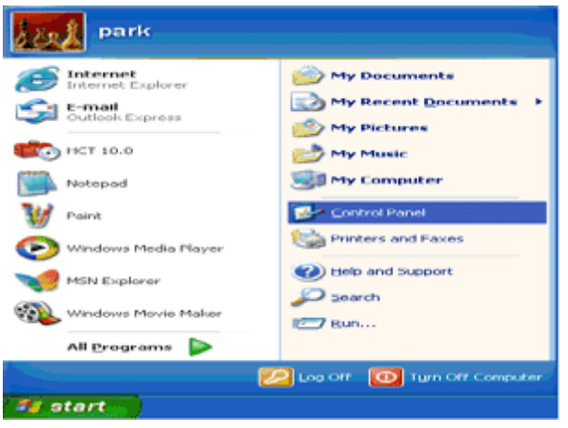

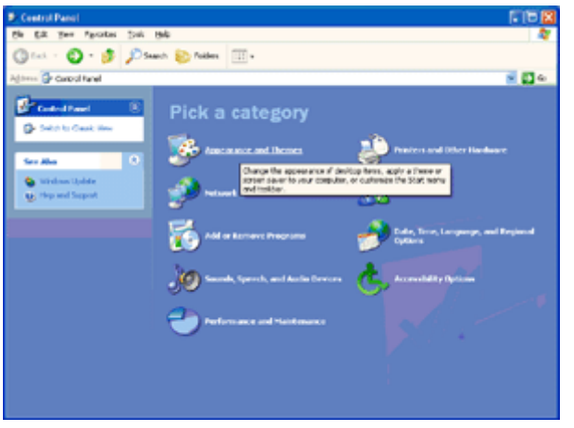

3. Click "**Display**" icon and choose the "**Settings**" tab then click "**Advanced..**".

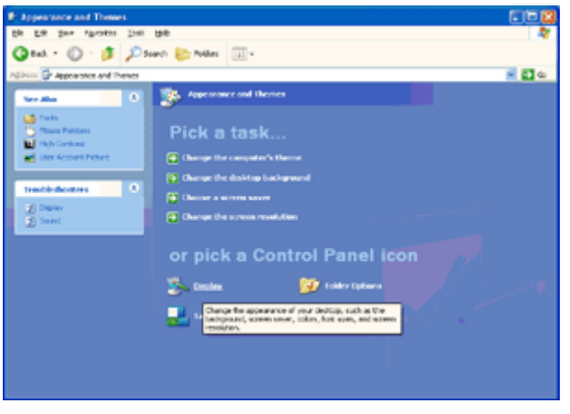

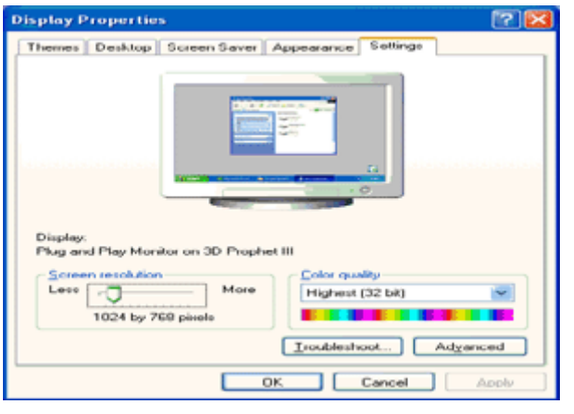

4. Click the "**Properties**" button on the "**Monitor**" tab and select "**Driver**" tab.

Downloaded from ManualMonitor.com Manuals

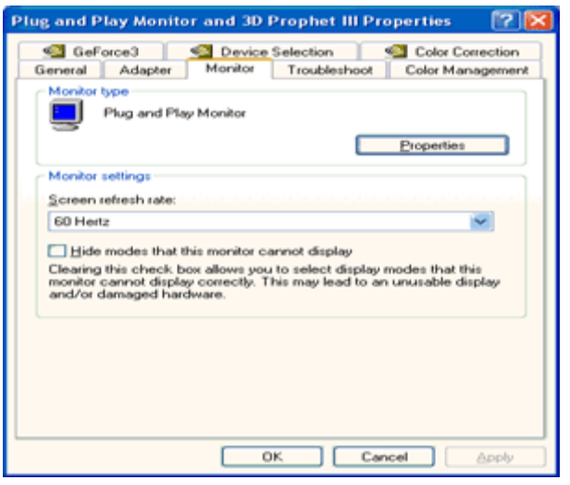

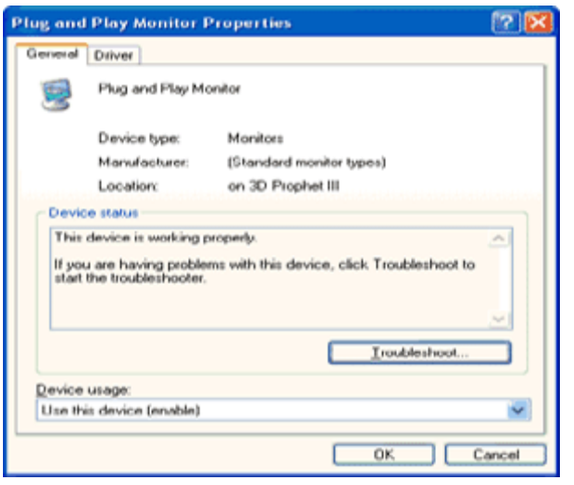

5. Click "**Update Driver..**" and select "**Install from a list or..**" then click "**Next**" button.

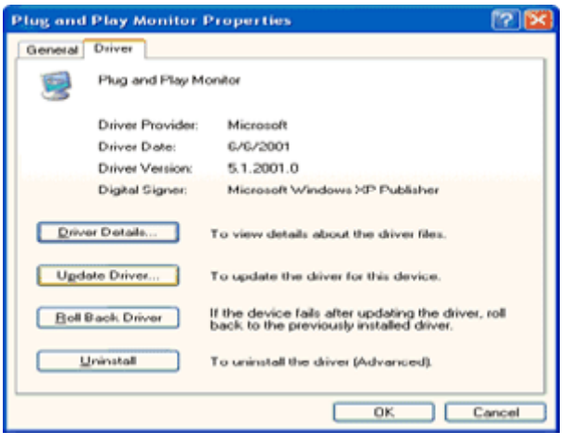

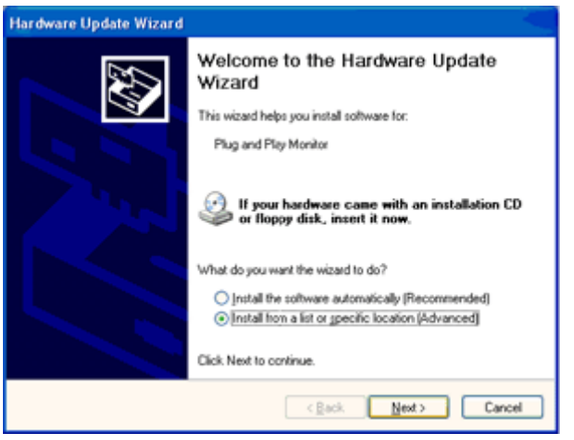
Hardware Update Wizard
Welcome to the Hardware Update Wizard
This wizard helps you install software for:
Plug and Play Monitor
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

6. Select "**Don't search ,I will..**" then click "**Next**" and then click "**Have disk**".

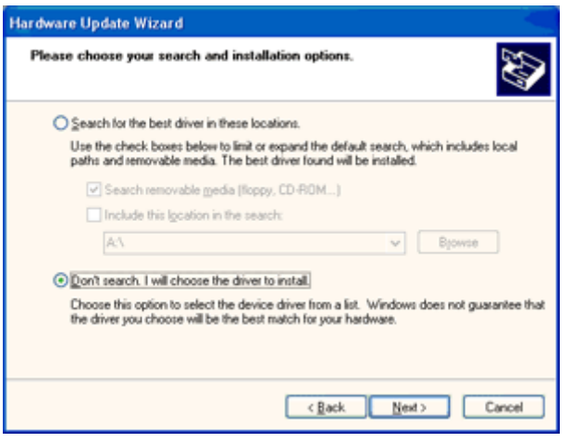
Hardware Update Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
A:\
Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back
Next >
Cancel

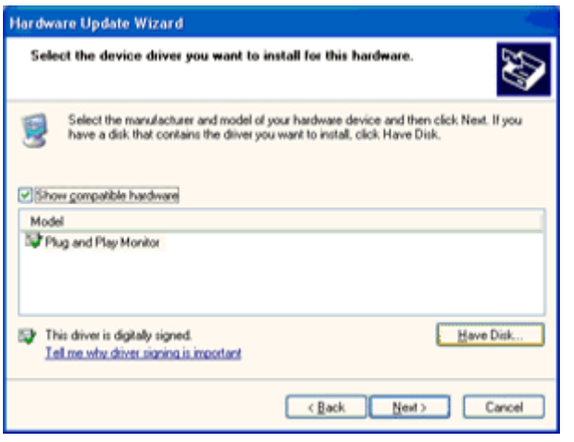
Hardware Update Wizard
Select the device driver you want to install for this hardware.
Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.
Show compatible hardware
Model
Plug and Play Monitor
This driver is digitally signed.
Tell me why driver signing is important
Have Disk...
< Back
Next >
Cancel

7. Click the "**Browse**" button then choose A:(D:\Driver) and choose your monitor model in the model list and click the "**Next**" button.

Downloaded from ManualMonitor.com Manuals

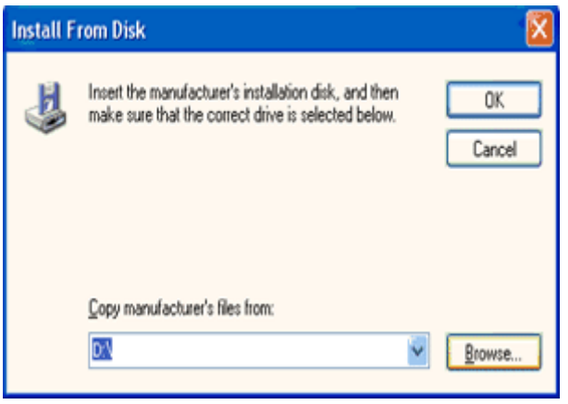

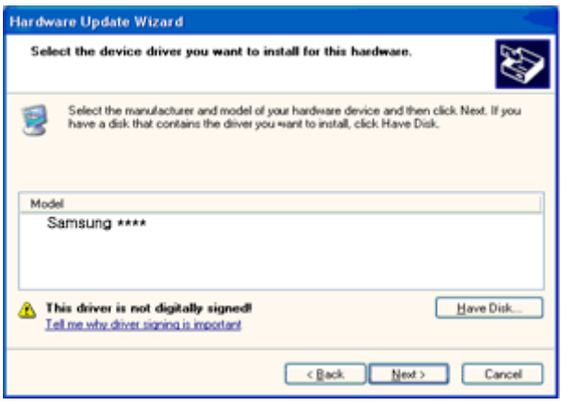
Hardware Update Wizard
Select the device driver you want to install for this hardware.
Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.
Model
Samsung ****
This driver is not digitally signed!
Tell me why driver signing is important
Have Disk...
< Back
Next >
Cancel

8. If you can see following "**Message**" window, then click the "**Continue Anyway**" button. Then click "**OK**" button.

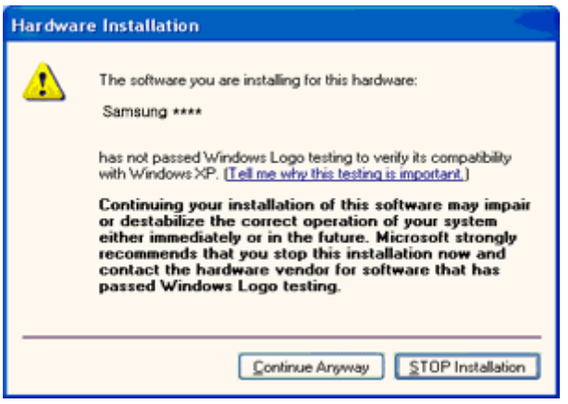
Hardware Installation
The software you are installing for this hardware:
Samsung ****
has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

This monitor driver is under certified MS logo,and this installation doesn't damage your system.The certified driver will be posted on Samsung Monitor homepage.
http://www.samsung.com/

9. Click the "**Close**" button then click "**OK**" button continually.

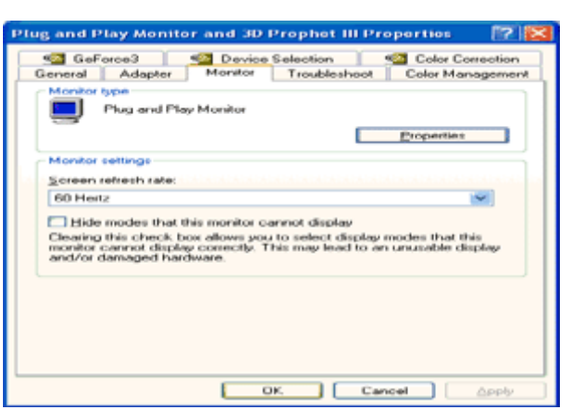

Downloaded from ManualMonitor.com Manuals

10. Monitor driver installation is completed.

Microsoft® Windows® 2000 Operating System

When you can see "Digital Signature Not Found" on your monitor, follow these steps.

1. Choose "**OK**" button on the "**Insert disk**" window.
2. Click the "**Browse**" button on the "**File Needed**" window.
3. Choose A:(D:\Driver) then click the "Open" button and then click "**OK**" button.

How to install

1. Click "**Start**" , "**Setting**" , "**Control Panel**".
2. Double click the "**Display**" Icon.
3. Choose the "**Settings**" tab and then click "**Advanced..**".
4. Choose "**Monitor**".
   Case1: If the "Properties" button is inactive, it means your monitor is properly configured. Please stop installation
   Case2: If the "Properties" button is active, click the "Properties" button then follow next steps continually.
5. Click "**Driver**" and then click on "**Update Driver..**" then click on the "Next" button.
6. Choose "**Display a list of the known drivers for this device so that I can choose a specific driver**" then click "**Next**" and then click "**Have disk**".
7. Click the "**Browse**" button then choose A:(D:\Driver).
8. Click the "**Open**" button, then click "**OK**" button.
9. Choose your monitor model and click the "**Next**" button then click "**Next**" button.
10. Click the "**Finish**" button then the "**Close**" button.

    If you can see the "**Digital Signature Not Found**" window then click the "**Yes**"button. And click the "**Finish**" button then the "**Close**" button.

Microsoft® Windows® Millennium Operating System

1. Click "**Start**" , "**Setting**" , "**Control Panel**".
2. Double click "**Display**" icon.
3. Select the "**Settings**" tab and click "**Advanced Properties**" button.
4. Select the "**Monitor**" tab.
5. Click the "**Change**" button in the "**Monitor Type**" area.
6. Choose "**Specify the location of the driver**".
7. Choose "**Display a list of all the driver in a specific location..**" then click "**Next**" button.
8. Click the "**Have Disk**" button
9. Specify A:\(D:\driver) then click "**OK**" button.
10. Select "**Show all devices**" and choose the monitor that corresponds to the one you connected to your computer and click "**OK**".
11. Continue choosing "**Close**" button and "**OK**" button until you close the Display Properties dialogue box.

Microsoft® Windows® NT Operating System

1. Click **Start**, **Settings**, **Control Panel**, and then double-click **Display** icon.
2. In Display Registration Information window, click Settings Tab and then click **All Display Modes**.
3. Select a mode that you wish to use (Resolution, Number of colors and Vertical frequency) and then click **OK**.
4. Click **Apply** button if you see the screen working normally after clicking **Test**. If the screen is not normal, change to a different mode (lower mode of resolution, colors or frequency).

   If there is no Mode at **All Display Modes**, select the level of resolution and vertical

Downloaded from ManualMonitor.com Manuals
PDF created with pdfFactory Pro trial version www.pdffactory.com

frequency by referring to the Preset Timing Modes in the user guide.

Linux Operating System

To execute X-Window, you need to make the X86Config file, which is a type of system setting file.

1. Press Enter at the first and the second screen after executing the X86Config file.
2. The third screen is for **setting your mouse**.
3. Set a mouse for your computer.
4. The next screen is for **selecting a keyboard**.
5. Set a Keyboard for your computer.
6. The next screen is for **setting your monitor**.
7. First of all, set a **horizontal frequency** for your monitor. (You can enter the frequency directly.)
8. Set a **vertical frequency** for your monitor. (You can enter the frequency directly.)
9. Enter the **model name of your monitor**. This information will not affect the actual execution of X-Window.
10. You have **finished** setting up your monitor.
    Execute X-Window after setting other requested hardware.

Downloaded from ManualMonitor.com Manuals

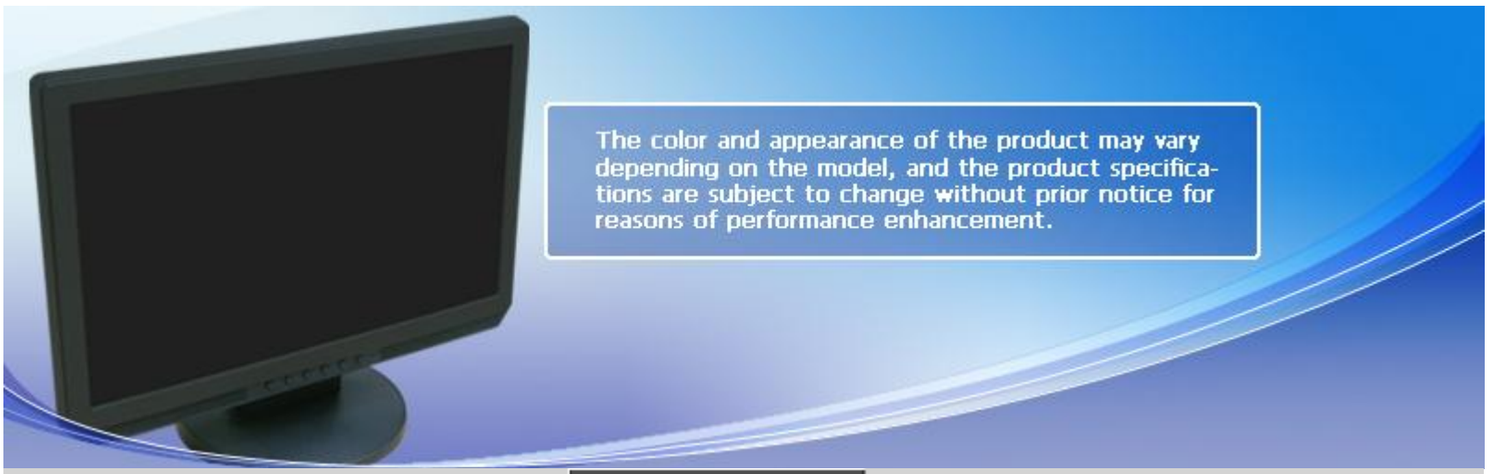
The color and appearance of the product may vary depending on the model, and the product specifications are subject to change without prior notice for reasons of performance enhancement.

1. [MENU/] Opens the on-screen menu and exits from the menu or closes the adjustment menu.
2. [▼/▲] These buttons allow you to adjust items in the menu.
3. [ ] Press this button to activate a highlighted menu item.
4. [**AUTO**] Press to self-adjust the incoming PC signal automatically.
   The values of fine,coarse and position are adjusted automatically.

Downloaded from ManualMonitor.com Manuals

AUTO

Menu	Description
AUTO	When the '**AUTO**' button is pressed, the Auto Adjustment screen appears as shown in the animated screen on the center. Auto adjustment allows the monitor to self-adjust to the incoming video signal. The values of fine, coarse and position are adjusted automatically. (Available in analog mode only) To make the automatic adjustment function sharper, execute the 'AUTO' function while the AUTO PATTERN is on. - If auto adjustment does not work properly, press AUTO button again to adjust picture with more accuracy. - If you change resolution in the control panel, auto function will be executed automatically.

OSD Lock & Unlock

When pressing the AUTO button after locking the OSD

Downloaded from ManualMonitor.com Manuals

When pressing the MENU button after locking the OSD

Menu	Description
	This is the function that locks the OSD in order to keep the current states of settings or prevent others from adjusting the current settings.

Downloaded from ManualMonitor.com Manuals

OSD Lock & Unlock	**Lock** : Hold down the menu button for more than five seconds to activate the OSD adjustment lock function. **Unlock** : Hold down the menu button for more than five seconds to deactivate the OSD adjustment lock function. ※ Though the OSD adjustment lock function is activated, you can still adjust the brightness and contrast, and adjust MagicBright ( ) using the Direct button.

MagicBright™

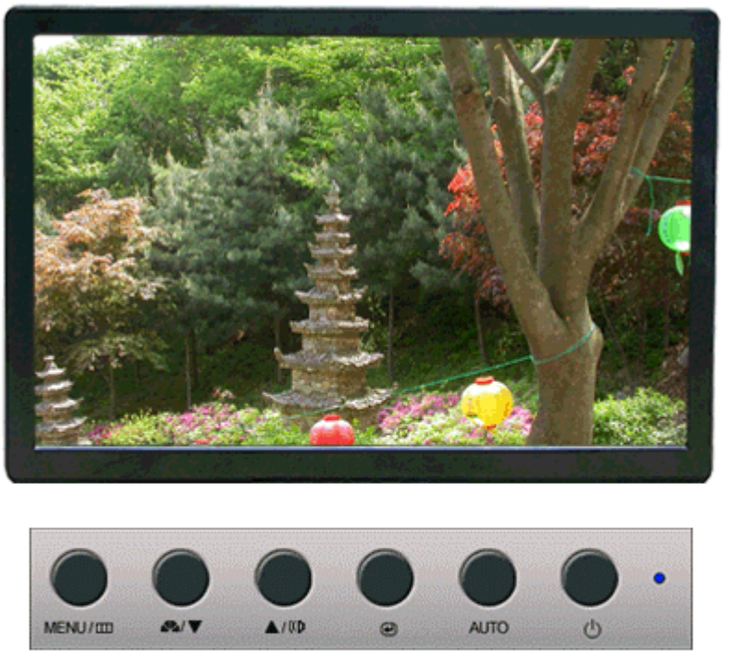

Menu		Description
	MagicBright™	Push the MagicBright button to circle through available preconfigured modes. - Six different modes (Custom/Text/Internet/Game/Sport/Movie)

Volume

Downloaded from ManualMonitor.com Manuals

Menu	Description
Volume	When OSD is not on the screen, push the button to adjust volume.

Picture	Brightness	Contrast			
Color	Color Tone	Color Control	Gamma		
Image	Coarse	Fine	Sharpness	H-Position	V-Position
OSD	Language	H-Position	V-Position	Transparency	Display Time
Setup	Image Reset	Color Reset			
Information					

Picture

Downloaded from ManualMonitor.com Manuals

Menu	Description	Play/Stop
Brightness	You can use the on-screen menus to change the brightness according to personal preference. [MENU→ ↵ → ↵ → ▲, ▼ → MENU]	
Contrast	You can use the on-screen menus to change the contrast according to personal preference. [MENU→ ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	

Color

Downloaded from ManualMonitor.com Manuals

Menu	Description	Play/Stop
Color Tone	The tone of the color can be changed and one of four modes can be selected - Cool, Normal, Warm and Custom. **Cool** - Makes whites bluish. **Normal** - Keeps whites white. **Warm** - Makes whites reddish. **Custom** - Select this mode when you want to adjust the image according to your preferences. [MENU→ ▲, ▼ → ↵ → ↵ → ▲, ▼ → MENU]	
Color Control	Adjusts individual R,G,B color balance. [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	
Gamma	Gamma correction changes the luminance of the colors with intermediate luminance. ı Mode 1 ı Mode 2 ı Mode 3 [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	

Image

Downloaded from ManualMonitor.com Manuals

Menu	Description	Play/Stop
Coarse	Removes noise such as vertical stripes. Coarse adjustment may move the screen image area. You may relocate it to the center using the horizontal control menu. (Available in analog mode only) [MENU→ ▲, ▼ → ↵ → ↵ → ▲, ▼ → MENU]	
Fine	Removes noise such as horizontal stripes. If the noise persists even after fine tuning, repeat it after adjusting the frequency (clock speed). (Available in analog mode only) [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	
Sharpness	Changes the clearance of image. [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	
H-Position	Changes the horizontal position of the monitor's entire display. (Available in analog mode only) [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	
V-Position	Changes the vertical position of the monitor's entire display. (Available in analog mode only) [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	

Downloaded from ManualMonitor.com Manuals

OSD

Menu	Description	Play/Stop
Language	You can choose one of 9 languages. • English, Deutsch, Español, Français, Italiano, Svenska, Русский , Português , Türkçe **Note**:The language chosen affects only the language of the OSD. It has no effect on any software running on the computer. [MENU→ ▲, ▼ → ↵ → ↵ → ▲, ▼ → MENU]	
H-Position	You can change the horizontal position where the OSD menu appears on your monitor. [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	
V-Position	You can change the vertical position where the OSD menu appears on your monitor. [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	
Transparency	Change the transparency of the background of the OSD. [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	
	The menu will be automatically turned off if no adjustments are made for a certain time period. You can set the amount of time the menu will wait before it	

Downloaded from ManualMonitor.com Manuals

Display Time	is turned off. 5 sec, 10 sec, 20 sec, 200 sec [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	

Setup

Menu	Description	Play/Stop
Image Reset	Image parameters are replaced with the factory default values. [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	
Color Reset	Color parameters are replaced with the factory default values. [MENU→ ▲, ▼ → ↵ → ▲, ▼ → ↵ → ▲, ▼ → MENU]	

Information

Downloaded from ManualMonitor.com Manuals

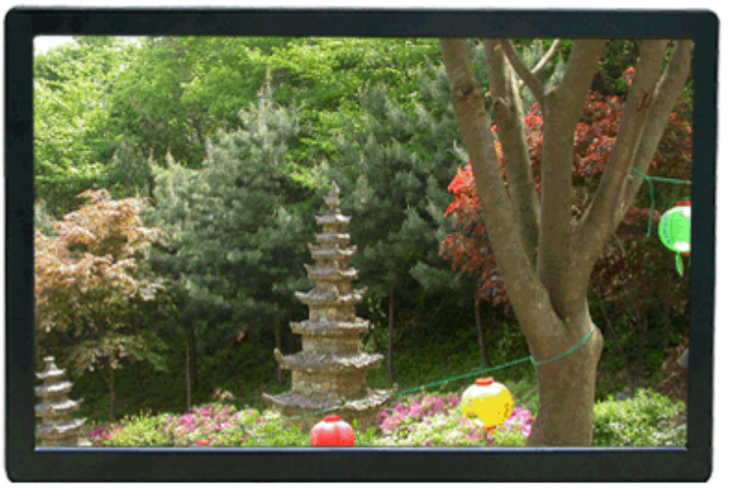

Menu	Description
Information	Shows a video source, display mode on the OSD screen. [MENU → ▲, ▼ → MENU]

Downloaded from ManualMonitor.com Manuals

The color and appearance of the product may vary depending on the model, and the product specifications are subject to change without prior notice for reasons of performance enhancement.

Check List

Before calling for service, check the information in this section to see if you can remedy any problems yourself. If you do need assistance, please call the phone number on the Information section or contact your dealer.

Symptom	Check List	Solutions
No images on the screen. I cannot turn on the monitor.	Is the power cord connected properly?	Check the power cord connection and supply.
	Can you see **"Check Signal Cable"** on the screen?	**(Connected using the D-sub cable)** Check the signal cable connection.
	If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen.	If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/XP/2000) and then change the frequency of the video card. (Refer to the Preset Timing Modes) Note: If the initial screen (the login screen) does not appear, contact the Service Center or your dealer.
	Can you see **"Not Optimum Mode","Recommended Mode 1680 x 1050 60Hz"** on the screen?	You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly. Adjust the maximum resolution and

Downloaded from ManualMonitor.com Manuals

		frequency that the monitor can handle properly. If the display exceeds SXGA or 75 Hz, a **"Not Optimum Mode","Recommended mode 1680 x 1050 60 Hz"** message is displayed. If the display exceeds 85 Hz, the display will work properly but the **"Not Optimum Mode","Recommended Mode 1680 x 1050 60 Hz"** message appears for one minute and then disappears. Please change to the recommended mode during this one-minute period. (The message is displayed again if the system is rebooted.)
	There is no image on the screen. Is the power indicator on the monitor blinking at 1 second intervals?	The monitor is in PowerSaver mode. press a key on the keyboard to activate the monitor and restore the image on the screen. If there is still no image, press the '⏎' button. Then press any key on the keyboard again to activate the monitor and restore the image on the screen.
I cannot see the On Screen Display.	Have you locked the On Screen Display (OSD) Menu to prevent changes?	Unlock the OSD by pressing the [MENU / ⊞] button for at least 5 seconds.
The screen shows strange colors or just black and white.	Is the screen displaying only one color as if looking at the screen through a cellophane paper?	Check the signal cable connection.Make sure the video card is fully inserted in it's slot.
	Have the screen colors become strange after running a program or due to a crash between applications?	Reboot the computer.
	Has the video card been set properly?	Set the video card by referring to the video card manual.
The screen suddenly has become unbalanced.	Have you changed the video card or the driver?	Adjust screen image position and size using the OSD.
	Have you adjusted the resolution or frequency to the monitor?	Adjust the resolution and frequency at the video card. (Refer to the Preset Timing Modes).
	The screen can be unbalanced due to the cycle of the video card signals. Readjust Position by referring to the OSD.	
The screen is out of focus or OSD cannot	Have you adjusted the resolution or frequency on the monitor?	Adjust the resolution and frequency of the video card.

Downloaded from ManualMonitor.com Manuals

be adjusted.		(Refer to the Preset Timing Modes).
LED is blinking but no images on the screen.	Is the frequency properly adjusted when checking the Display Timing on the menu?	Adjust the frequency properly by referring to the video card manual and the Preset Timing Modes. (The maximum frequency per resolution may differ from product to product.)
There are only 16 colors shown on the screen. The screen colors have changed after changing the video card.	Have the Windows colors been set properly?	Windows ME/2000/XP: Set the colors properly at the **Control Panel → Display → Settings**.
	Has the video card been set properly?	Set the video card by referring to the video card manual.
There is a message that reads "Unrecognized monitor, Plug & Play (VESA DDC) monitor found".	Have you installed the monitor driver?	Install the monitor driver according to the Driver Installation Instructions.
	See the video card manual to see if the Plug & Play (VESA DDC) function can be supported.	Install the monitor driver according to the Driver Installation Instructions.
Problems related to Audio	No sound	Ensure that the audio cable is firmly connected to both the audio-in port on your monitor and the audio-out port on your sound card. (Refer to Connecting the Monitor) Check the volume level.
	Sound level is too low.	Check the volume level. If the volume is still too low after turning the control to its maximum, check the volume control on the computer sound card or software program.

Check the following items if there is trouble with the monitor.

1. Check if the power cord and the video cables are properly connected to the computer.
2. Check if the computer beeps more than 3 times when booting.
   (If it does, request an after-service for the main board of the computer.)
3. If you installed a new video card or if you assembled the PC, check if the installed the adapter (video) driver and the monitor driver.
4. Check if the scanning ratio of the video screen is set at 56 Hz ~ 75 Hz.
   (Do not exceed 60 Hz when using the maximum resolution.)
5. If you have problems in installing the adapter (video) driver, boot the computer in Safe Mode, remove the Display Adapter at the "**Control Panel → System → Device Administrator**" and then reboot the computer to reinstall the adapter (video) driver.

If problems repeatedly occur, contact an authorized service center.

Downloaded from ManualMonitor.com Manuals

Q & A

Question	Answer
How can I change the frequency?	Frequency can be changed by reconfiguring the video card. Note that video card support can vary, depending on the version of the driver used. (Refer to the computer or the video card manual for details.)
How can I adjust the resolution?	Windows ME/XP/2000 : Set the resolution at the Control Panel→Display→Settings. * Contact the video card manufacturer for details.
How can I set the Power Saving function?	Windows ME/XP/2000 : Set the function at BIOS-SETUP of the computer or the screen saver. (Refer to Windows/Computer Manual).
How can I clean the outer case/LCD Panel?	Disconnect the power cord and then clean the monitor with a soft cloth, using either a cleaning solution or plain water. Do not leave any remains of the detergent nor scratch the case. Do not allow any water to go inside the monitor.

Self-Test Feature Check

Self-Test Feature Check | Warning Messages | Environment | Useful Tips

Your monitor provides a self test feature that allows you to check whether your monitor is functioning properly.

Self-Test Feature Check

1. Turn off both your computer and the monitor.
2. Unplug the video cable from the back of the computer.
3. Turn on the monitor.
   If the monitor is functioning properly, you will see a box in the illustration below.

This box appears during normal operation if the video cable becomes disconnected or damaged.

Downloaded from ManualMonitor.com Manuals

4. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.
   If your monitor screen remains blank after using the previous procedure, check your video controller and computer system; your monitor is functioning properly.

Warning Messages

If there is something wrong with the input signal, a message appears on the screen or the screen goes blank although the power indicator LED is still on. The message may indicate that the monitor is out of scan range or that you need to check the signal cable.

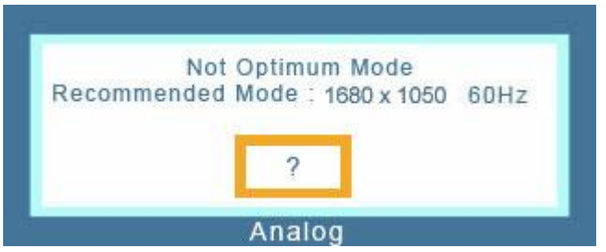

Environment

The location and the position of the monitor may influence the quality and other features of the monitor.

1. If there are any sub woofer speakers near the monitor, unplug and relocate the woofer to another room.
2. Remove all electronic devices such as radios, fans, clocks and telephones that are within 3 feet (one meter) of the monitor.

Useful Tips

- A monitor recreates visual signals received from the computer. Therefore, if there is trouble with the computer or the video card, this can cause the monitor to become blank, have poor coloring, noise, Video mode not supported, etc. In this case, first check the source of the problem, and then contact the Service Center or your dealer.

- **Judging the monitor's working condition**
  If there is no image on the screen or a **"Not Optimum Mode","Recommended Mode 1680 X 1050 60 Hz"** message comes up, disconnect the cable from the computer while the monitor is still powered on.
  - If there is a message coming up on the screen or if the screen goes white, this means the monitor is in working condition.
  - In this case, check the computer for trouble.

Downloaded from ManualMonitor.com Manuals

Model SyncMaster 2220LM

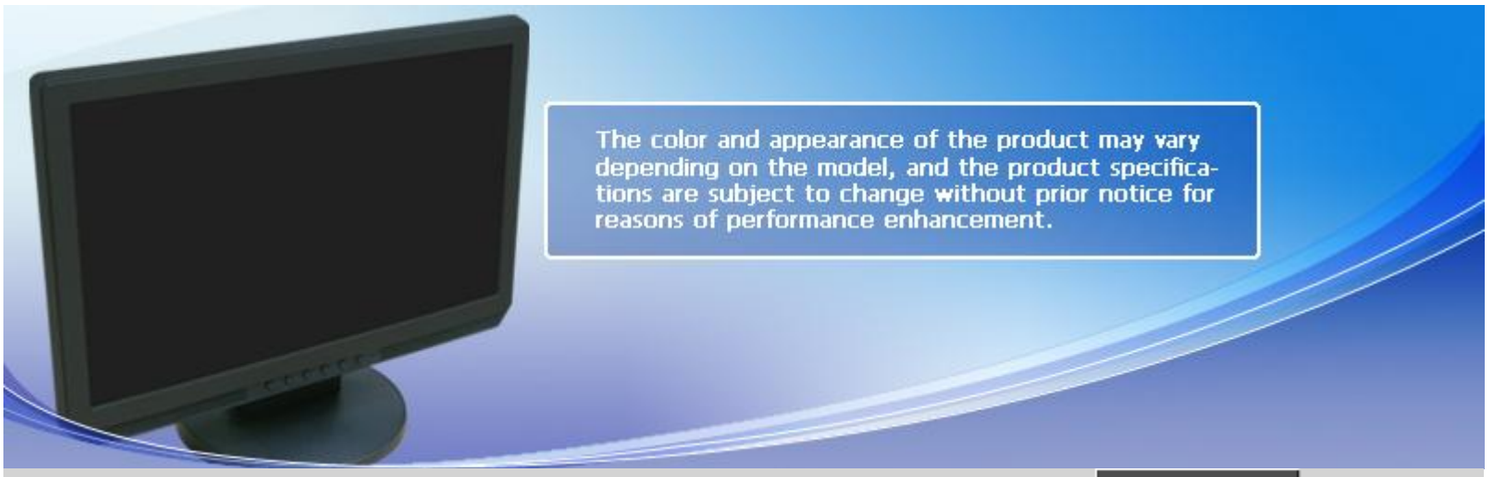
The color and appearance of the product may vary depending on the model, and the product specifications are subject to change without prior notice for reasons of performance enhancement.

General

General

Model Name	SyncMaster 2220LM

LCD Panel

Size	22" Wide Diagonal (55.9 cm)
Display area	473.76 mm(H) x 296.1 mm(V)
Pixel Pitch	0.282 mm (H) x 0.282 mm (V)

Synchronization

Horizontal	30 ~ 81 kHz
Vertical	56 Hz ~ 75 Hz

Display Color

16.7 M

Resolution

Optimum resolution	1680 x 1050 @ 60 Hz
Maximum resolution	1680 x 1050 @ 60 Hz

Input Signal, Terminated

RGB Analog.
0.7 Vp-p ± 5 %
separate H/V sync, Composite, SOG
TTL level (V high ⩾ 2.0 V, V low ⩽ 0.8 V)

Maximum Pixel Clock

Downloaded from ManualMonitor.com Manuals

150 MHz

Power Supply

AC 100 - 240 V~ (+/- 10 %), 50/60 Hz

Signal Cable

15pin-to-15pin D-sub cable, Detachable

Dimensions (WxHxD) / Weigh

517.26 X 362.48 X 61.56 mm / 20.4 x 14.3 x 2.4 inch (Without Stand)

517.26 X 424.38 X 207.83 mm / 20.4 x 16.7 x 8.2 inch (With Stand) / 5.1 kg / 11.2 lbs

VESA Mounting Interface

100 mm x 100 mm (For use with Specialty(Arm) Mounting hardware.)

Max internal speaker

2 W

Environmental considerations

Operating	Temperature : 14 °F~104 °F (-10 ℃~ 40 ℃) Humidity : 20% ~ 80%, non-condensing
Storage	Temperature : -4 °F~140 °F (-20 ℃~ 60 ℃) Humidity: 10 % ~ 80 %, non-condensing

Plug and Play Capability

This monitor can be installed on any Plug & Play compatible system. Interaction of the monitor and computer systems will provide the best operating conditions and monitor settings. In most cases, monitor installation will proceed automatically, unless the user wishes to select alternate settings.

Dot Acceptable

TFT LCD panel manufactured by using advanced semiconductor technology with precision of 1ppm (one millionth) above is used for this product. But the pixels of RED, GREEN, BLUE and WHITE color seem to be bright sometimes or some of black pixels could be seen. This is not from bad quality and you can use it without uneasiness.

- For example, the number of TFT LCD sub pixels that is contained in this product are 3,888,000.

Note: Design and specifications are subject to change without prior notice.

Class B Equipment (Information Communication equipment for residential use)

This product complies with the Electromagnetic Compatibility Directives for residential use and can be used in all areas including common residential areas.

(Class B equipment emits less electromagnetic waves than Class A equipment.)

PowerSaver

Downloaded from ManualMonitor.com Manuals

This monitor has a built-in power management system called PowerSaver. This system saves energy by switching your monitor into a low-power mode when it has not been used for a certain amount of time. The monitor automatically returns to normal operation when you press a key on the keyboard. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods. The PowerSaver system operates with a VESA DPM compliant video card installed in your computer. Use a software utility installed on your computer to set up this feature.

State	Normal Operation	Power saving mode	Power off (Power button OFF) EPA/ENERGY 2000
Power Indicator	Blue	Blue blinking	Off
Power Consumption	Less than 55 watts	Less than 1 watts	Less than 1 watts

This monitor is EPA ENERGY STAR® compliant and ENERGY2000 compliant when used with a computer equipped with VESA DPM functionality.
As an ENERGY STAR® Partner, SAMSUNG has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Preset Timing Modes

If the signal transferred from the computer is the same as the following Preset Timing Modes, the screen will be adjusted automatically. However, if the signal differs, the screen may go blank while the power LED is on. Refer to the video card manual and adjust the screen as follows.

Table 1. Preset Timing Modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
IBM. 640 x 350	31.469	70.086	25.175	+/-
IBM. 640 x 480	31.469	59.940	25.175	-/-
IBM. 720 x 400	31.469	70.087	28.322	-/+
MAC. 640 x 480	35.000	66.667	30.240	-/-
MAC. 832 x 624	49.726	74.551	57.284	-/-
MAC. 1152 x 870	68.681	75.062	100.000	-/-
VESA. 640 x 480	31.469	59.940	25.175	-/-
VESA. 640 x 480	37.861	72.809	31.500	-/-
VESA. 640 x 480	37.500	75.000	31.500	-/-

Downloaded from ManualMonitor.com Manuals

VESA. 800 x 600	35.156	56.250	36.000	+/+
VESA. 800 x 600	37.879	60.317	40.000	+/+
VESA. 800 x 600	48.077	72.188	50.000	+/+
VESA. 800 x 600	46.875	75.000	49.500	+/+
VESA. 1024 x 768	48.363	60.004	65.000	-/-
VESA. 1024 x 768	56.476	70.069	75.000	-/-
VESA. 1024 x 768	60.023	75.029	78.750	+/+
VESA. 1152 x 864	67.500	75.000	108.000	+/+
VESA.1280 x 960	60.000	60.000	108.000	+/+
VESA.1280 x 1024	79.976	75.025	135.000	+/+
VESA. 1440 x 900	55.935	59.887	106.500	-/+
VESA.1680 x 1050	65.29	59.954	146.26	-/+

Horizontal Frequency

The time to scan one line connecting the right edge to the left edge of the screen horizontally is called Horizontal Cycle and the inverse number of the Horizontal Cycle is called Horizontal Frequency. Unit: kHz

Vertical Frequency

Like a fluorescent lamp, the screen has to repeat the same image many times per second to display an image to the user. The frequency of this repetition is called Vertical Frequency or Refresh Rate. Unit: Hz

Downloaded from ManualMonitor.com Manuals

The color and appearance of the product may vary depending on the model, and the product specifications are subject to change without prior notice for reasons of performance enhancement.

Contact SAMSUNG WORLDWIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

North America		
U.S.A	1-800-SAMSUNG (7267864)	http://www.samsung.com
CANADA	1-800-SAMSUNG (7267864)	http://www.samsung.com/ca
MEXICO	01-800-SAMSUNG (7267864)	http://www.samsung.com/mx

Latin America		
ARGENTINE	0800-333-3733	http://www.samsung.com/ar
BRAZIL	4004-0000	http://www.samsung.com/br
CHILE	800-726-7864 (SAMSUNG)	http://www.samsung.com/cl
COLOMBIA	01-8000112112	http://www.samsung.com.co
COSTA RICA	0-800-507-7267	http://www.samsung.com/latin
ECUADOR	1-800-10-7267	http://www.samsung.com/latin
EL SALVADOR	800-6225	http://www.samsung.com/latin
GUATEMALA	1-800-299-0013	http://www.samsung.com/latin
JAMAICA	1-800-234-7267	http://www.samsung.com/latin

Downloaded from ManualMonitor.com Manuals

PANAMA	800-7267	http://www.samsung.com/latin
PUERTO RICO	1-800-682-3180	http://www.samsung.com/latin
REP. DOMINICA	1-800-751-2676	http://www.samsung.com/latin
TRINIDAD & TOBAGO	1-800-7267-864	http://www.samsung.com/latin
VENEZUELA	0-800-100-5303	http://www.samsung.com/latin

Europe

BELGIUM	02 201 2418	http://www.samsung.com/be
CZECH REPUBLIC	844 000 844	http://www.samsung.com/cz
	Distributor pro Českou republiku: Samsung Zrt., česka organizační složka Vyskočilova 4, 14000 Praha 4	
DENMARK	70 70 19 70	http://www.samsung.com/dk
FINLAND	030-6227 515	http://www.samsung.com/fi
FRANCE	3260 SAMSUNG(7267864) (€ 0,15/min)	http://www.samsung.com/fr
GERMANY	01805 - 121213 (€ 0,14/Min)	http://www.samsung.de
HUNGARY	06-80-SAMSUNG (7267864)	http://www.samsung.com/hu
ITALIA	800 SAMSUNG (7267864)	http://www.samsung.com/it
LUXEMBURG	0032 (0)2 201 24 18	http://www.samsung.lu
NETHERLANDS	0900 20 200 88 (€ 0,10/Min)	http://www.samsung.com/nl
NORWAY	815-56 480	http://www.samsung.com/no
POLAND	0 801 801 881	http://www.samsung.com/pl
PORTUGAL	80 8 200 128	http://www.samsung.com/pt
REPUBLIC OF IRELAND	0818 717 100	http://www.samsung.com/uk
SLOVAKIA	0800-SAMSUNG (7267864)	http://www.samsung.com/sk
SPAIN	902 10 11 30	http://www.samsung.com/es
SWEDEN	0771-400 200	http://www.samsung.com/se
SWITZERLAND	0800-7267864	http://www.samsung.com/ch
U.K	0870 SAMSUNG (7267864)	http://www.samsung.com/uk

CIS

ESTONIA	800-7267	http://www.samsung.ee
LATVIA	800-7267	http://www.samsung.com/lv

Downloaded from ManualMonitor.com Manuals

LITHUANIA	8-800-77777	http://www.samsung.lt
KAZAKHSTAN	8 800 080 1188	http://www.samsung.kz
RUSSIA	8-800-200-0400	http://www.samsung.ru
UKRAINE	8-800-502-0000	http://www.samsung.com/ur
UZBEKISTAN	140-1234	http://www.samsung.uz

Asia Pacific		
AUSTRALIA	1300 362 603	http://www.samsung.com/au
CHINA	800-810-5858, 010- 6475 1880	http://www.samsung.com.cn
HONG KONG	3698-4698	http://www.samsung.com/hk
INDIA	3030 8282, 1800 1100 11	http://www.samsung.com/in
INDONESIA	0800-112-8888	http://www.samsung.com/id
JAPAN	0120-327-527	http://www.samsung.com/jp
MALAYSIA	1800-88-9999	http://www.samsung.com/my
PHILIPPINES	1800-10-SAMSUNG (7267864)	http://www.samsung.com/ph
SINGAPORE	1800-SAMSUNG (7267864)	http://www.samsung.com/sg
THAILAND	1800-29-3232, 02-689-3232	http://www.samsung.com/th
TAIWAN	0800-329-999	http://www.samsung.com/tw
VIETNAM	1 800 588 889	http://www.samsung.com/vn

Middle East & Africa		
SOUTH AFRICA	0860 7267864 (SAMSUNG)	http://www.samsung.com/za
U.A.E	800SAMSUNG (7267864) 8000-4726	http://www.samsung.com/mea

Terms

- **Dot Pitch**
  The image on a monitor is composed of red, green and blue dots. The closer the dots, the higher the resolution. The distance between two dots of the same color is called the 'Dot Pitch'. Unit: mm

- **Vertical Frequency**
  The screen must be redrawn several times per second in order to create and display an image

Downloaded from ManualMonitor.com Manuals

for the user. The frequency of this repetition per second is called Vertical Frequency or Refresh Rate. Unit: Hz

Example :If the same light repeats itself 60 times per second, this is regarded as 60 Hz.

- **Horizontal Frequency**
  The time to scan one line connecting the right edge to the left edge of the screen horizontally is called Horizontal Cycle. The inverse number of the Horizontal Cycle is called Horizontal Frequency. Unit: kHz

- **Interlace and Non-Interlace Methods**
  Showing the horizontal lines of the screen from the top to the bottom in order is called the Non-Interlace method while showing odd lines and then even lines in turn is called the Interlace method. The Non-Interlace method is used for the majority of monitors to ensure a clear image. The Interlace method is the same as that used in TVs.

- **Plug & Play**
  This is a function that provides the best quality screen for the user by allowing the computer and the monitor to exchange information automatically. This monitor follows the international standard VESA DDC for the Plug & Play function.

- **Resolution**
  The number of horizontal and vertical dots used to compose the screen image is called 'resolution'. This number shows the accuracy of the display. High resolution is good for performing multiple tasks as more image information can be shown on the screen.

  Example :If the resolution is 1680 x 1050 , this means the screen is composed of 1680 horizontal dots (horizontal resolution) and 1050 vertical lines (vertical resolution).

For Better Display

1. Adjust computer resolution and screen injection rate (refresh rate) oncomputer as described below to enjoy the best quality of picture. You can have an uneven quality of picture in the screen if the best quality of picture is not provided in TFT-LCD.

   - Resolution: 1680 x 1050
   - Vertical frequency (refresh rate): 60 Hz

2. TFT LCD panel manufactured by using advanced semiconductor technology with precision of 1ppm (one millionth) above is used for this product. But the pixels of RED, GREEN, BLUE and WHITE color seem to be bright sometimes or some of black pixels could be seen.
   This is not from bad quality and you can use it without uneasiness.

   - For example, the number of TFT LCD sub pixels that is contained in this product are 3,888,000.

3. When you clean the monitor and the panel outside, please apply the recommended small amount of cleaner by using soft and dry cloth and polish it. Let LCD area not to be forced but to be scrubbed out softly.
   If excessive force is applied, you can have a stain on it.

4. If you are not satisfied with the quality of the picture, you can get better quality of the picture

Downloaded from ManualMonitor.com Manuals

by executing "auto adjustment function" in display screen that is appeared as window termination button is pressed.
If there's still noise after automatic adjustment, use FINE/COARSE adjustment function.

5. If you view a fixed screen for an extended period of time, residual image or blurriness may appear.
Change the mode to energy save or set a screensaver to move the picture when you need to be away from the monitor for an extended period of time.

Authority

Information in this document is subject to change without notice.
© 2007 Samsung Electronics Co., Ltd. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Samsung Electronics Co., Ltd. is strictly forbidden.

Samsung Electronics Co., Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Samsung is the registered trademark of Samsung Electronics Co., Ltd.; *Microsoft*, *Windows* and *Windows NT* are registered trademarks of Microsoft Corporation; *VESA*, *DPM* and *DDC* are registered trademarks of Video Electronics Standard Association; the *ENERGY STAR*® name and logo are registered trademarks of the U.S. Environmental Protection Agency (EPA). As an ENERGY STAR® Partner, Samsung Electronics Co., Ltd. has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. All other product names mentioned herein may be the trademarks or registered trademarks of their respective owners.

Downloaded from ManualMonitor.com Manuals

Correct Disposal of This Product
(Waste Electrical & Electronic Equipment) - Europe only

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Downloaded from ManualMonitor.com Manuals